

Change Managed Wifi Name and Password



access
ANACORTES FIBER INTERNET

Step 1: Locate Gateway/Beacon

 


Gateway


Beacon

Step 2: Find Username and Password

On the bottom of your router, you will find the default username and password to log on to the router. In addition, check to see if you have a Beacon or Gateway.

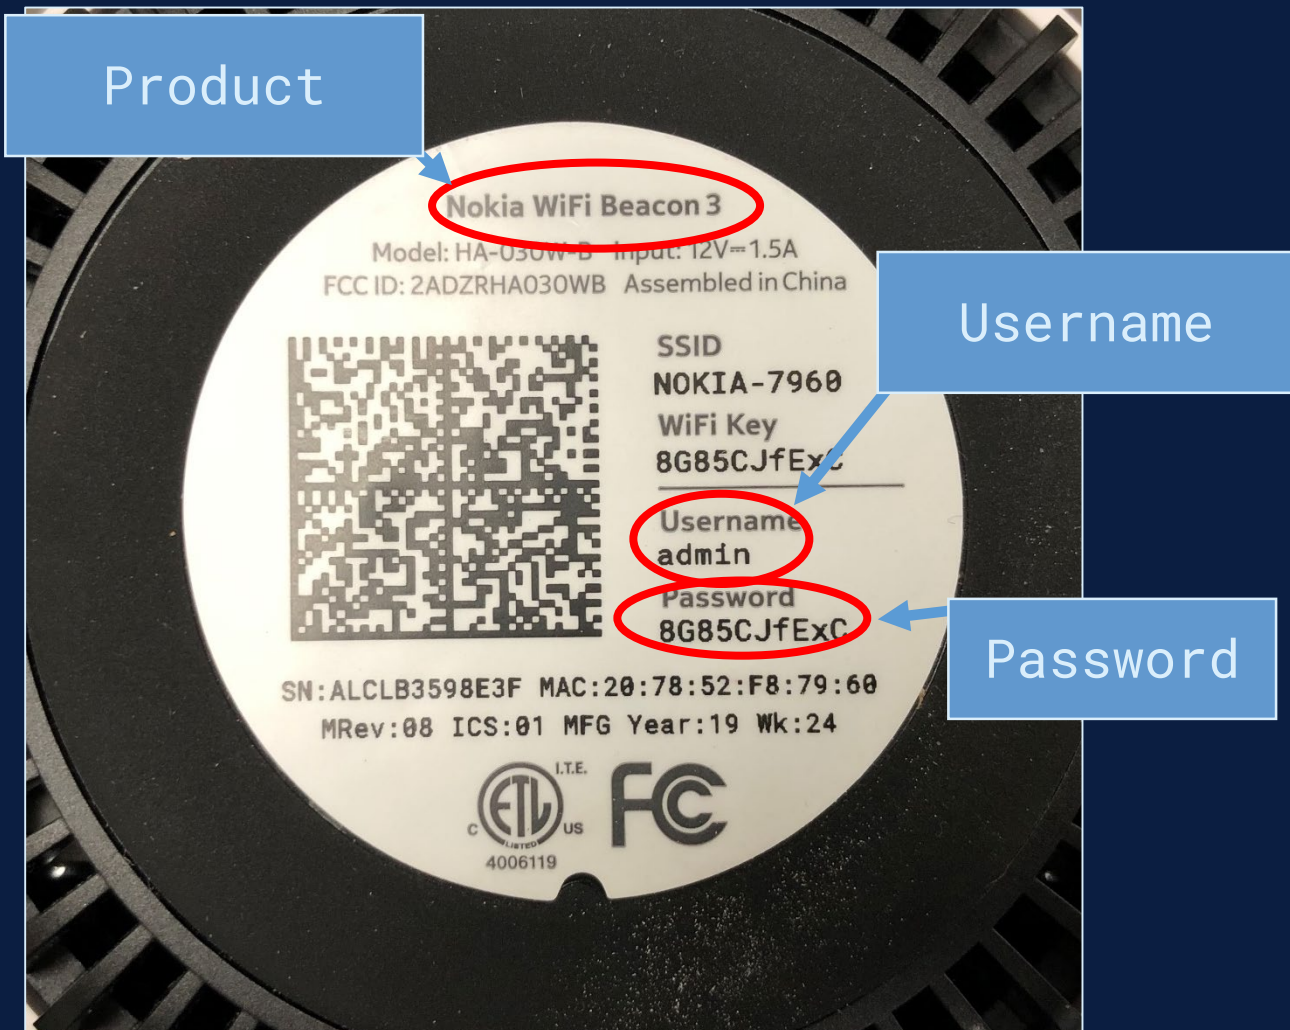


 Step 3: Connect Device to Gateway/Beacon

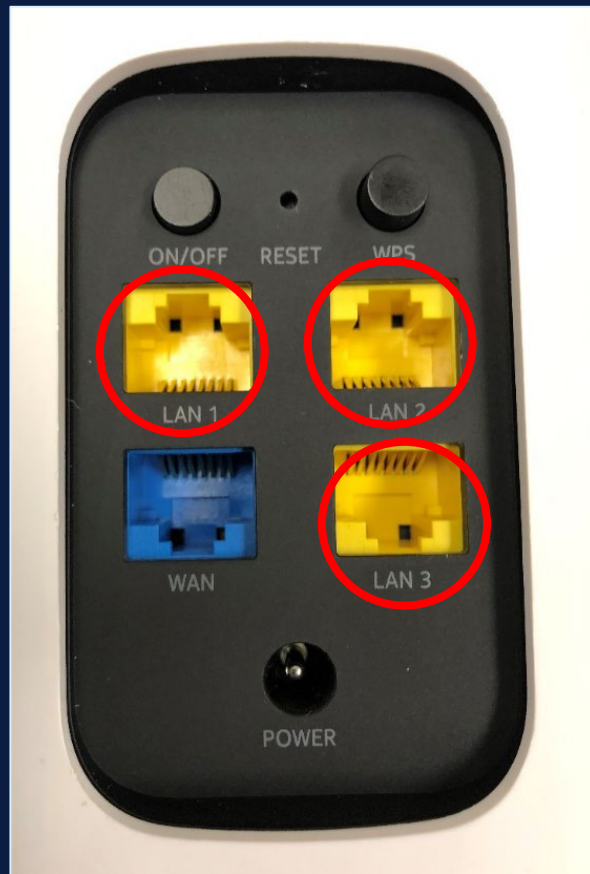

Connect a device to the router either wirelessly or through an Ethernet connection. If connecting through an Ethernet wire, make sure it is plugged into one of the LAN ports.

 Step 4: Web Browser

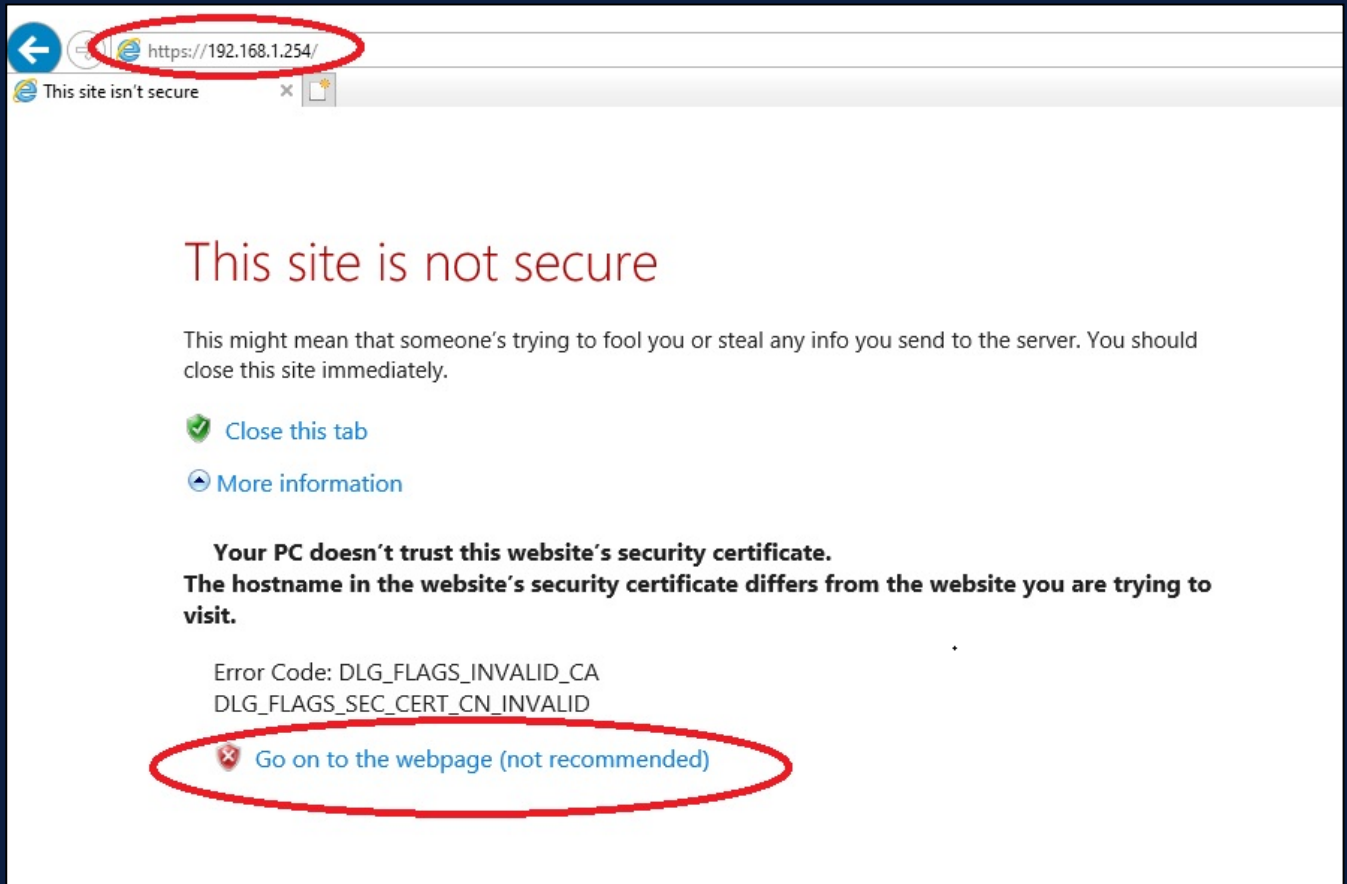


Using a browser (Besides Chrome) on your connected device, type in the following to access your router manager:

Gateway - `https://192.168.1.254`

Beacon - `https://192.168.18.1`

You will first go to a page warning you that the site is insecure. Ignore this and continue to the page.

 Step 5: WiFi Manager

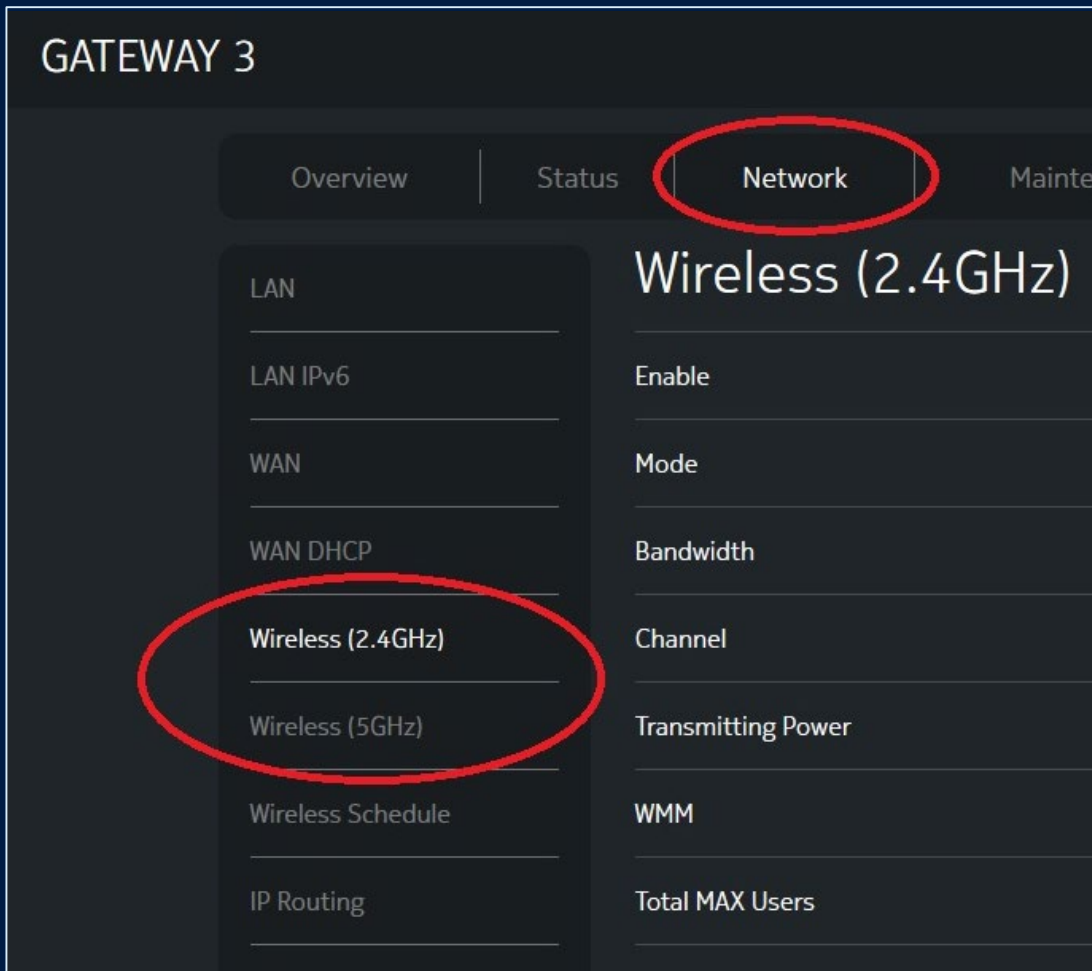

After you log in, you should see the WiFi Manager page. Click “Network” at the top of the page and navigate to the 2.4Ghz and 5Ghz options.

Step 6: SSID Config

SSID Configuration

SSID Select

SSID Name

Enable SSID

SSID Broadcast

MAX Users

Encryption Mode

WPA Version

WPA Encryption Mode

WPA Key Show Password

Enable WPS

WPS Mode

Domain Grouping

In both the 2.4Ghz and 5Ghz options, you will be able to change the WiFi name (SSID Name) and password (WPA Key). To prevent confusion, you will want to make sure the names and passwords are the same for both 2.4Ghz and 5Ghz. Press "Save" when finished.